

## SOUTH CAROLINA PORTS AUTHORITY



Continuous Air Monitoring Station for the Wando Welch Terminal

Q3 2019 Quarterly Report

October 2019

# SOUTH CAROLINA PORTS AUTHORITY – CONTINUOUS AIR MONITORING STATION FOR THE WANDO WELCH TERMINAL

#### Q3 2019 Quarterly Report

Prepared for:

South Carolina Ports Authority

176 Concord Street

Charleston

South Carolina 29401

Prepared by:

Arcadis U.S., Inc.

4915 Prospectus Drive

Suite G

Durham

North Carolina 27713

Tel 919 544 4535

Fax 919 544 5690

Our Ref.: RN006310

Date:

October 2019

This document is intended only for the use of the individual or entity for which it was prepared and may contain information that is privileged, confidential and exempt from disclosure under applicable law. Any dissemination, distribution or copying of this document is strictly prohibited.

### **CONTENTS**

| 1 E           | executive S | summary                                | 1 |
|---------------|-------------|----------------------------------------|---|
| 2 Project Des |             | cription                               | 2 |
| 2             | 2.1 Quarte  | erly Results                           | 2 |
| 3 (           | Quality Ass | urance/Quality Control                 | 9 |
| 3             | 3.1 Daily a | and Quarterly QC/Validation            | 9 |
|               |             |                                        |   |
| TA            | BLES        |                                        |   |
| Table         | e 2-1.      | 24-Hour Averages and Daily Maximums    | 3 |
| Table         | e 2-2.      | Quarterly Statistics                   | 6 |
| Table         | e 2-3.      | National Ambient Air Quality Standards | 6 |
| Table         | e 2-4.      | Monthly Statistics                     | 8 |
| <b>-</b> 16   |             |                                        |   |
| FIG           | BURES       |                                        |   |
| Figur         | e 2-1.      | 24-hour Averages                       | 7 |
| Figur         | e 2-2.      | Max 1-hour Averages                    | 8 |

#### 1 EXECUTIVE SUMMARY

Arcadis was contracted in late December 2010 to provide continuous air monitoring services to the South Carolina Ports Authority (SCPA) at the Wando Welch Terminal in Mt. Pleasant, SC. Arcadis has followed through on the planned schedule and activities since that award. The major accomplishments were to complete the Quality Assurance Plan (QAP), purchase the instruments, complete the site setup, and then to begin acquiring data. This report is the 34th quarterly data report (second quarterly report in year nine of operations) and presents the data summaries requested by SCPA and described in the scope of work. The data acquisition was started on May 6, 2011 in line with the court mandated start date. This report encompasses a period corresponding to data taken during the period from July 1, 2019 through September 30, 2019.

arcadis.com ES-1

#### 2 PROJECT DESCRIPTION

SCPA requested a system to provide ambient air quality data including particulate matter less than 2.5 microns (PM<sub>2.5</sub>), SO<sub>2</sub>, and NO<sub>2</sub> for a period of 5 years at the Wando Welch Terminal of the port of Charleston. Arcadis maintains the monitoring instruments, stocks consumables such as filters and calibration gases, and orders spare parts such that downtime will be minimized. Arcadis has established standard operating procedures to perform daily downloads and to provide Level 1 data validation for the resulting data. The air monitoring project has proven to be reliable and is generating valid high-quality data suitable for use in dispersion modeling or other potential purposes.

The QAP is updated periodically to reflect improvements to the basic operating procedures or to document changes in the air quality standards. An update was performed on September 20, 2012, following the annual maintenance program and an on-site audit by the S.C. Department of Health and Environmental Control (conducted June 14-15, 2012) to reflect actual procedures at the end of the first year of operation. An update was also performed on October 17, 2013, to reflect changes to the National Ambient Air Quality Standards (NAAQS) for PM<sub>2.5</sub>. This QAP is written consistent with the current ambient air quality standards for PM, NO<sub>X</sub> and SO<sub>2</sub> as defined by the U.S. Environmental Protection Agency.

The location selected for sampling and the sampling equipment has proven to be well-suited for the project as it is centrally located to the port activities and is influenced by local sources and meteorological conditions. Although this is not a typical fence line site, it has proven to be well suited for the evaluation of port activities and related air quality effects. Arcadis has been able to remotely access the control computer and reliably interact with the instruments. The instruments are very responsive to events such as container handling equipment and the morning openings of the front gates to entering truck traffic. These patterns can be reviewed in the archived data any time in the future.

#### 2.1 Quarterly Results

The 24-hr daily averages for PM<sub>2.5</sub>, NO, NO<sub>2</sub>, NO<sub>X</sub>, and SO<sub>2</sub> and the maximum daily values for NO<sub>2</sub> (1-hr average) and SO<sub>2</sub> (1-hr and 3-hr average) for this period are shown in Table 2-1. Quarterly statistics showing averages, minimums and maximums for all parameters are summarized in Table 2-2, with the corresponding NAAQS limits shown in Table 2-3. 24-hr averages for all constituents are also shown graphically in Figure 2-1. Maximum 1-hr averages for NO<sub>2</sub> and SO<sub>2</sub> are shown in Figure 2-2. Statistics are broken down by months and summarized in Table 2-4.

Table 2-1. 24-Hour Averages and Daily Maximums

| Table 2-1. | 24-Hou                       | 24-Hour Averages and Daily Maximums |                          |                          |                          |                           |                          |                          |  |  |  |
|------------|------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|---------------------------|--------------------------|--------------------------|--|--|--|
|            | :                            | 24-hour Av                          | /erages                  | Daily<br>1-hr            | Max<br>Avg.              | Daily<br>Max 3-hr<br>Avg. |                          |                          |  |  |  |
| Date       | PM <sub>2.5</sub><br>(μg/m³) | NO<br>(ppb)                         | NO <sub>2</sub><br>(ppb) | NO <sub>X</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | NO <sub>2</sub><br>(ppb)  | SO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) |  |  |  |
| 7/1/19     | 13.29                        | 8.45                                | 10.23                    | 18.65                    | 0.49                     | 22.73                     | 2.11                     | 1.60                     |  |  |  |
| 7/2/19     | 15.14                        | 16.28                               | 13.78                    | 30.06                    | 0.06                     | 41.68                     | 0.37                     | 0.18                     |  |  |  |
| 7/3/19     | 19.08                        | 8.97                                | 12.10                    | 21.08                    | 0.20                     | 33.47                     | 1.36                     | 0.80                     |  |  |  |
| 7/4/19     | 4.60                         | 0.29                                | 4.81                     | 5.10                     | 0.04                     | 10.02                     | 0.17                     | 0.06                     |  |  |  |
| 7/8/19     | 13.66                        | 0.75                                | 2.45                     | 2.73                     | 0.01                     | 9.38                      | 0.01                     | 0.01                     |  |  |  |
| 7/9/19     | 14.99                        | 16.12                               | 11.11                    | 26.89                    | 0.09                     | 32.76                     | 1.25                     | 0.42                     |  |  |  |
| 7/10/19    | 8.87                         | 11.00                               | 8.35                     | 19.01                    | 0.03                     | 27.84                     | 0.11                     | 0.07                     |  |  |  |
| 7/11/19    | 11.31                        | 12.87                               | 10.60                    | 23.29                    | 0.06                     | 33.56                     | 0.33                     | 0.22                     |  |  |  |
| 7/12/19    | 8.71                         | 6.73                                | 7.81                     | 14.31                    | 0.04                     | 16.85                     | 0.13                     | 0.12                     |  |  |  |
| 7/13/19    | 8.85                         | 6.76                                | 8.60                     | 15.22                    | 0.04                     | 14.47                     | 0.11                     | 0.06                     |  |  |  |
| 7/14/19    | 13.43                        | 3.03                                | 6.96                     | 9.75                     | 0.07                     | 15.23                     | 0.50                     | 0.39                     |  |  |  |
| 7/15/19    | 12.91                        | 13.18                               | 19.44                    | 32.56                    | 0.19                     | 35.42                     | 1.44                     | 0.72                     |  |  |  |
| 7/16/19    | 15.18                        | 14.23                               | 12.90                    | 26.83                    | 0.07                     | 30.62                     | 0.30                     | 0.18                     |  |  |  |
| 7/17/19    | 22.48                        | 14.92                               | 12.35                    | 26.88                    | 0.04                     | 33.46                     | 0.37                     | 0.21                     |  |  |  |
| 7/18/19    | 19.10                        | 8.61                                | 10.28                    | 18.62                    | 0.10                     | 17.84                     | 0.28                     | 0.23                     |  |  |  |
| 7/19/19    | 14.49                        | 8.30                                | 9.89                     | 17.94                    | 0.14                     | 17.76                     | 0.52                     | 0.34                     |  |  |  |
| 7/20/19    | 9.23                         | 4.09                                | 7.12                     | 10.90                    | 0.10                     | 16.89                     | 0.31                     | 0.21                     |  |  |  |
| 7/21/19    | 6.73                         | 0.12                                | 1.64                     | 1.26                     | 0.06                     | 5.71                      | 0.17                     | 0.13                     |  |  |  |
| 7/22/19    | 9.25                         | 6.17                                | 7.53                     | 13.53                    | 0.10                     | 18.55                     | 0.40                     | 0.27                     |  |  |  |
| 7/23/19    | 10.01                        | 8.94                                | 8.38                     | 17.17                    | 0.08                     | 20.33                     | 0.30                     | 0.27                     |  |  |  |
| 7/24/19    | 9.15                         | 4.65                                | 6.18                     | 10.44                    | 0.03                     | 14.02                     | 0.09                     | 0.04                     |  |  |  |
| 7/25/19    | 16.60                        | 3.95                                | 6.61                     | 10.10                    | 0.06                     | 16.10                     | 0.17                     | 0.12                     |  |  |  |
| 7/26/19    | 8.05                         | 4.56                                | 5.35                     | 9.52                     | 0.03                     | 16.16                     | 0.07                     | 0.06                     |  |  |  |
| 7/27/19    | 13.59                        | 1.07                                | 2.90                     | 3.51                     | 0.05                     | 7.67                      | 0.12                     | 0.10                     |  |  |  |
| 7/28/19    | 8.12                         | 0.01                                | 0.87                     | 0.24                     | 0.05                     | 3.18                      | 0.13                     | 0.08                     |  |  |  |
| 7/29/19    | 10.78                        | 10.50                               | 8.58                     | 18.68                    | 0.13                     | 24.49                     | 0.60                     | 0.47                     |  |  |  |
| 7/30/19    | 4.14                         | 7.81                                | 6.30                     | 13.67                    | 0.06                     | 18.87                     | 0.19                     | 0.12                     |  |  |  |
| 7/31/19    | 6.26                         | 12.01                               | 8.47                     | 20.17                    | 0.11                     | 19.43                     | 0.22                     | 0.19                     |  |  |  |
| 8/1/19     | 11.39                        | 16.36                               | 10.94                    | 26.97                    | *                        | 25.98                     | *                        | *                        |  |  |  |
| 8/2/19     | 8.14                         | 8.49                                | 8.82                     | 16.96                    | *                        | 21.60                     | *                        | *                        |  |  |  |
| 8/3/19     | 3.59                         | 1.60                                | 2.67                     | 3.84                     | *                        | 8.55                      | *                        | *                        |  |  |  |
| 8/4/19     | 4.22                         | 0.46                                | 1.89                     | 2.29                     | *                        | 5.12                      | *                        | *                        |  |  |  |

|         | :                            | 24-hour Av  | Daily Max<br>1-hr Avg.   |                          | Daily<br>Max 3-hr<br>Avg. |                          |                          |                          |
|---------|------------------------------|-------------|--------------------------|--------------------------|---------------------------|--------------------------|--------------------------|--------------------------|
| Date    | PM <sub>2.5</sub><br>(μg/m³) | NO<br>(ppb) | NO <sub>2</sub><br>(ppb) | NO <sub>X</sub><br>(ppb) | SO <sub>2</sub><br>(ppb)  | NO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) |
| 8/5/19  | 12.68                        | 10.68       | 12.21                    | 22.87                    | *                         | 27.31                    | *                        | *                        |
| 8/6/19  | 5.39                         | 11.19       | 10.82                    | 22.01                    | *                         | 23.69                    | *                        | *                        |
| 8/7/19  | 9.23                         | 8.10        | 9.12                     | 17.23                    | *                         | 18.08                    | *                        | *                        |
| 8/8/19  | 12.22                        | 9.35        | 12.30                    | 21.65                    | *                         | 25.76                    | *                        | *                        |
| 8/9/19  | 13.56                        | 9.24        | 13.14                    | 22.39                    | 0.49                      | 28.27                    | 3.29                     | 1.74                     |
| 8/10/19 | 10.94                        | 7.85        | 9.28                     | 17.13                    | 0.31                      | 28.45                    | 1.75                     | 0.63                     |
| 8/11/19 | 10.25                        | 0.75        | 4.69                     | 5.43                     | 0.52                      | 12.31                    | 5.00                     | 1.74                     |
| 8/12/19 | 11.74                        | 9.25        | 7.06                     | 16.23                    | 0.01                      | 21.86                    | 0.16                     | 0.00                     |
| 8/13/19 | 7.23                         | 10.72       | 9.72                     | 20.44                    | 0.04                      | 25.76                    | 0.23                     | 0.14                     |
| 8/14/19 | 6.51                         | 11.80       | 14.17                    | 25.98                    | 0.00                      | 28.76                    | 0.01                     | 0.00                     |
| 8/15/19 | 10.86                        | 21.52       | 11.87                    | 33.39                    | 0.03                      | 23.62                    | 0.19                     | 0.08                     |
| 8/16/19 | 7.00                         | 9.74        | 10.50                    | 20.24                    | 0.00                      | 22.60                    | 0.00                     | 0.00                     |
| 8/17/19 | 3.23                         | 8.23        | 8.43                     | 16.65                    | 0.03                      | 20.28                    | 0.59                     | 0.20                     |
| 8/18/19 | 5.80                         | 3.81        | 2.00                     | 5.50                     | 0.19                      | 9.45                     | 4.35                     | 1.45                     |
| 8/19/19 | 9.83                         | 12.56       | 3.68                     | 15.94                    | 0.06                      | 10.43                    | 0.34                     | 0.22                     |
| 8/20/19 | 10.99                        | 20.75       | 4.54                     | 24.89                    | 0.02                      | 26.41                    | 0.29                     | 0.13                     |
| 8/21/19 | 6.08                         | 13.03       | 4.25                     | 17.02                    | 0.03                      | 11.36                    | 0.18                     | 0.11                     |
| 8/22/19 | 8.26                         | 12.28       | 3.31                     | 15.24                    | 0.05                      | 9.17                     | 0.45                     | 0.18                     |
| 8/23/19 | 5.45                         | 13.45       | 3.05                     | 16.09                    | 0.03                      | 10.99                    | 0.30                     | 0.15                     |
| 8/24/19 | 6.43                         | 2.68        | 1.12                     | 3.49                     | 0.01                      | 6.37                     | 0.07                     | 0.03                     |
| 8/25/19 | 9.53                         | 0.15        | 0.00                     | 0.02                     | 0.01                      | 0.02                     | 0.06                     | 0.02                     |
| 8/26/19 | 9.65                         | 6.18        | 1.86                     | 7.65                     | 0.01                      | 5.91                     | 0.05                     | 0.02                     |
| 8/27/19 | 10.10                        | 10.02       | 4.66                     | 14.46                    | 0.03                      | 18.41                    | 0.10                     | 0.08                     |
| 8/28/19 | 6.17                         | 26.91       | 9.05                     | 35.76                    | 0.04                      | 30.68                    | 0.23                     | 0.15                     |
| 8/29/19 | 13.26                        | 5.97        | 3.59                     | 9.45                     | 0.07                      | 9.08                     | 0.39                     | 0.10                     |
| 8/30/19 | 7.16                         | 3.65        | 5.70                     | 9.30                     | 0.03                      | 20.67                    | 0.09                     | 0.05                     |
| 8/31/19 | 7.99                         | 1.48        | 3.97                     | 5.42                     | 0.01                      | 10.75                    | 0.09                     | 0.03                     |
| 9/1/19  | 4.69                         | 0.24        | 1.51                     | 1.73                     | 0.02                      | 7.26                     | 0.08                     | 0.03                     |
| 9/2/19  | 3.72                         | 0.03        | 0.38                     | 0.36                     | 0.01                      | 0.78                     | 0.13                     | 0.05                     |
| 9/3/19  | 3.84                         | 3.12        | 2.68                     | 5.77                     | 0.02                      | 7.41                     | 0.12                     | 0.04                     |
| 9/4/19  | 6.00                         | 0.00        | 0.06                     | 0.02                     | 0.01                      | 0.32                     | 0.09                     | 0.03                     |
| 9/5/19  | 4.12                         | 0.00        | 0.42                     | 0.38                     | 0.02                      | 1.50                     | 0.17                     | 0.06                     |
| 9/6/19  | 6.18                         | 6.11        | 8.65                     | 14.75                    | 0.06                      | 14.84                    | 0.51                     | 0.23                     |

|         | :                            |             | Max<br>Avg.              | Daily<br>Max 3-hr<br>Avg. |                          |                          |                          |                          |
|---------|------------------------------|-------------|--------------------------|---------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Date    | PM <sub>2.5</sub><br>(μg/m³) | NO<br>(ppb) | NO <sub>2</sub><br>(ppb) | NO <sub>X</sub><br>(ppb)  | SO <sub>2</sub><br>(ppb) | NO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) |
| 9/7/19  | 12.44                        | 8.20        | 10.40                    | 18.59                     | 0.18                     | 22.15                    | 0.64                     | 0.51                     |
| 9/8/19  | 9.68                         | 1.88        | 4.68                     | 6.53                      | 0.04                     | 18.03                    | 0.09                     | 0.08                     |
| 9/9/19  | 10.91                        | 13.65       | 9.65                     | 23.27                     | 0.06                     | 27.82                    | 0.34                     | 0.13                     |
| 9/10/19 | 9.66                         | 12.02       | 8.24                     | 20.16                     | 0.16                     | 25.98                    | 1.40                     | 0.49                     |
| 9/11/19 | 9.69                         | 8.37        | 6.85                     | 15.16                     | 0.08                     | 19.81                    | 0.23                     | 0.16                     |
| 9/12/19 | 8.24                         | 11.74       | 7.49                     | 19.18                     | 0.10                     | 17.35                    | 0.28                     | 0.21                     |
| 9/13/19 | 5.80                         | 8.23        | 4.85                     | 12.92                     | 0.08                     | 14.29                    | 0.18                     | 0.13                     |
| 9/14/19 | 8.65                         | 0.93        | 0.40                     | 1.16                      | 0.06                     | 2.04                     | 0.19                     | 0.09                     |
| 9/15/19 | 7.36                         | 0.58        | 0.18                     | 0.53                      | 0.06                     | 1.36                     | 0.12                     | 0.07                     |
| 9/16/19 | 10.44                        | 5.96        | 3.31                     | 9.16                      | 0.08                     | 7.40                     | 0.29                     | 0.14                     |
| 9/17/19 | 11.36                        | 9.44        | 4.87                     | 14.24                     | 0.09                     | 12.17                    | 0.25                     | 0.15                     |
| 9/18/19 | 11.88                        | 6.16        | 4.82                     | 10.89                     | 0.11                     | 14.29                    | 0.21                     | 0.18                     |
| 9/19/19 | 9.57                         | 4.16        | 3.14                     | 7.23                      | 0.15                     | 8.18                     | 0.32                     | 0.25                     |
| 9/20/19 | 5.84                         | 5.62        | 2.73                     | 8.17                      | 0.13                     | 11.62                    | 0.31                     | 0.24                     |
| 9/21/19 | 7.88                         | 5.80        | 3.88                     | 9.48                      | 0.10                     | 21.99                    | 0.19                     | 0.17                     |
| 9/22/19 | 7.34                         | 0.64        | 1.96                     | 2.57                      | 0.07                     | 17.31                    | 0.13                     | 0.09                     |
| 9/23/19 | 7.03                         | 14.17       | 7.69                     | 21.82                     | 0.26                     | 17.65                    | 1.11                     | 0.65                     |
| 9/24/19 | 10.29                        | 8.98        | 9.55                     | 18.52                     | 0.39                     | 19.03                    | 1.48                     | 1.03                     |
| 9/25/19 | 9.61                         | 26.83       | 11.46                    | 38.27                     | 0.18                     | 33.22                    | 0.64                     | 0.41                     |
| 9/26/19 | 9.17                         | 8.64        | 8.54                     | 17.17                     | 0.07                     | 28.97                    | 0.15                     | 0.14                     |
| 9/27/19 | 6.94                         | 9.98        | 7.73                     | 17.68                     | 0.06                     | 24.08                    | 0.17                     | 0.13                     |
| 9/28/19 | 8.14                         | 6.32        | 5.30                     | 11.56                     | 0.06                     | 31.05                    | 0.21                     | 0.13                     |
| 9/29/19 | 11.74                        | 0.38        | 1.90                     | 2.25                      | 0.14                     | 7.09                     | 0.61                     | 0.37                     |
| 9/30/19 | 13.85                        | 7.04        | 6.82                     | 13.84                     | 0.15                     | 17.58                    | 0.48                     | 0.35                     |

<sup>\*</sup> SO2 data removed due to clogged instrument influent line. Line unclogged on 8/9/2019 at 0945.

Table 2-2. Quarterly Statistics

|         |                              | 24-hour A   | Daily<br>1-hr            | Daily Max<br>3-hr Avg.   |                          |                          |                          |                          |
|---------|------------------------------|-------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Date    | PM <sub>2.5</sub><br>(μg/m³) | NO<br>(ppb) | NO <sub>2</sub><br>(ppb) | NO <sub>X</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | NO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) |
| Average | 9.49                         | 7.84        | 6.63                     | 14.31                    | 0.09                     | 17.69                    | 0.51                     | 0.27                     |
| Minimum | 3.23                         | 0.00        | 0.00                     | 0.02                     | 0.00                     | 0.02                     | 0.00                     | 0.00                     |
| Maximum | 22.48                        | 26.91       | 19.44                    | 38.27                    | 0.52                     | 41.68                    | 5.00                     | 1.74                     |

Table 2-3. National Ambient Air Quality Standards

| Pollutant         | Primary/<br>Secondary | Averaging<br>Time | Level                 | Form                                                                          |  |  |  |  |
|-------------------|-----------------------|-------------------|-----------------------|-------------------------------------------------------------------------------|--|--|--|--|
| NO <sub>2</sub>   | Primary               | 1-hour            | 100 ppb               | 98th Percentile, averaged over 3 years                                        |  |  |  |  |
|                   | Primary and Secondary | Annual            | 53 ppb <sup>(1)</sup> | Annual Mean                                                                   |  |  |  |  |
| SO <sub>2</sub>   | Primary               | 1-hour            | 75 ppb <sup>(2)</sup> | 99th Percentile of 1-hour daily maximum concentrations, averaged over 3 years |  |  |  |  |
|                   | Secondary             | 3-hour            | 0.5 ppm               | Not to be exceeded more than once per year                                    |  |  |  |  |
|                   | Primary               | Annual            | 12 μg/m³              | Annual mean, averaged over 3 years                                            |  |  |  |  |
| PM <sub>2.5</sub> | Secondary             | Annual            | 15 μg/m³              | Annual mean, averaged over 3 years                                            |  |  |  |  |
| FIVI2.5           | Primary and Secondary | 24-hour           | 35 μg/m³              | 98th Percentile, averaged over 3 years                                        |  |  |  |  |

<sup>(1)</sup> The official level of the annual NO2 standard is 0.053 ppm, equal to 53 ppb, shown here for the purpose of clearer comparison to the 1-hour standard.

<sup>(2)</sup> Final rule signed June 2, 2010. The 1971 annual and 24-hour SO2 standards were revoked in that same rulemaking. However, these standards remain in effect until one year after an area is designated for the 2010 standard, except in areas designated nonattainment for the 1971 standards, where the 1971 standards remain in effect until implementation plans to attain or maintain the 2010 standard are approved.

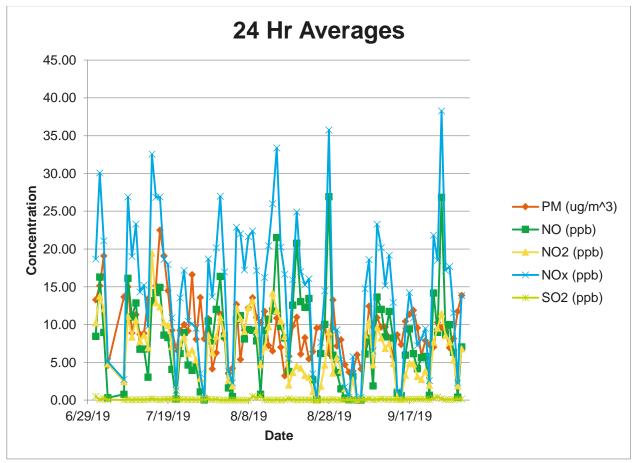


Figure 2-1. 24-hour Averages

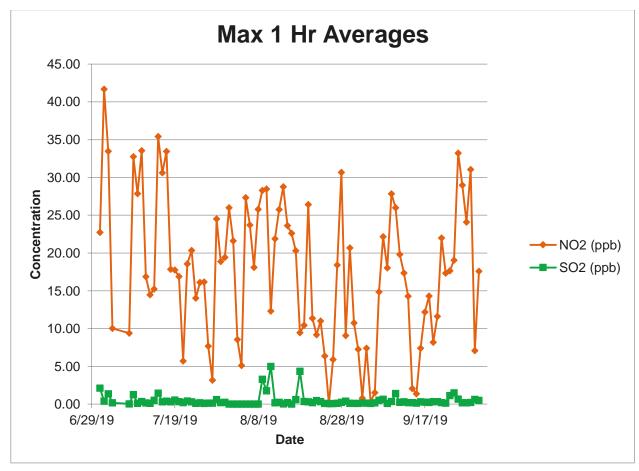


Figure 2-2. Max 1-hour Averages

Table 2-4. Monthly Statistics

|       |                              | Monthly D   |                          | Daily Max<br>3-hr Avg.   |                          |                          |                          |                          |
|-------|------------------------------|-------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Month | PM <sub>2.5</sub><br>(μg/m³) | NO<br>(ppb) | NO <sub>2</sub><br>(ppb) | NO <sub>X</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | NO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) | SO <sub>2</sub><br>(ppb) |
| 7/19  | 11.71                        | 7.66        | 8.27                     | 15.65                    | 0.09                     | 20.52                    | 0.43                     | 0.27                     |
| 8/19  | 8.54                         | 9.30        | 6.72                     | 15.87                    | 0.09                     | 17.67                    | 0.79                     | 0.32                     |
| 9/19  | 8.40                         | 6.51        | 5.00                     | 11.44                    | 0.10                     | 15.09                    | 0.37                     | 0.23                     |

#### 3 QUALITY ASSURANCE/QUALITY CONTROL

QA/QC procedures applied to this project are described in a Quality Assurance Plan titled Continuous Air Monitoring Station for the Wando Welch Terminal (October 17, 2013, Revision 3).

#### 3.1 Daily and Quarterly QC/Validation

According to the QAP prepared for this work, results are reviewed for anomalies and validated daily. These validations are recorded on QA/QC Daily Comment Sheets. The occurrence and duration of normal calibration and maintenance activities are also recorded.

Daily QC checks were performed in accordance with section 5.1 of the QAPP. The PAC Display data logging software is remotely accessed from the ARCADIS office in Durham, NC where the instrumentation is monitored for alarms and the data trends are reviewed for irregularities. NOx and SO2 zero and calibration values displayed on the PAC Display screen from the previous calibration event are recorded in the QC Log Book. After checking the PAC Display system for any anomalies, the H05 raw data file from the previous day is downloaded to Arcadis' Durham, NC server. The data file is saved to the project folder on the server and then processed by a Microsoft Excel macro. The resulting Excel file provides values for daily averages and maxima as well as alarm and calibration information. This information is recorded on the daily QC log sheet. Comments and observations regarding data quality are noted on the QC log sheet and are also entered on the SCSPA QA/QC Daily Comment Sheet. The Project Manager is notified of any issues immediately.

Percent completeness for Quarter 3 was calculated by dividing both the number of hours flagged by the macro as "Insufficient Data" as well as hours for which no data was obtained by the total number of hours in the quarter. Each of the three instruments (5014i, 42i, and 43i) typically produces 24 hours of data each day, for a total of 72 hours per day of recorded data. One daily Excel file per week was validated by verifying the formulas and inputs used in the Microsoft Excel macro calculations are correct. The ranges used to calculate the PM 2.5 24-hour average, NO2 Daily Max 1-hour average, SO2 Daily Max 1-hour average, and the 24-hour averages for PM, NO, NO2, NOx, and SO2 were checked during each validation. Four random hourly average ranges for PM, NO, NO2, NOx, and SO2 were also checked during each validation.

The data for this quarter were assessed as follows:

- Percent completeness was 91.00%.
- 100% of the validated data were flagged as "good".

The QAP stated a completeness goal of 75% for PM<sub>2.5</sub>, SO<sub>2</sub> and NO<sub>X</sub>. The data collected from April 1, 2019 through June 30, 2019 met this goal.



#### Arcadis U.S., Inc.

4915 Prospectus Drive
Suite G
Durham, North Carolina 27713
Tel 919 544 4535

www.arcadis.com

Fax 919 544 5690